


DUST/BLOKR[®] POLYMER BLEND

VUMOS

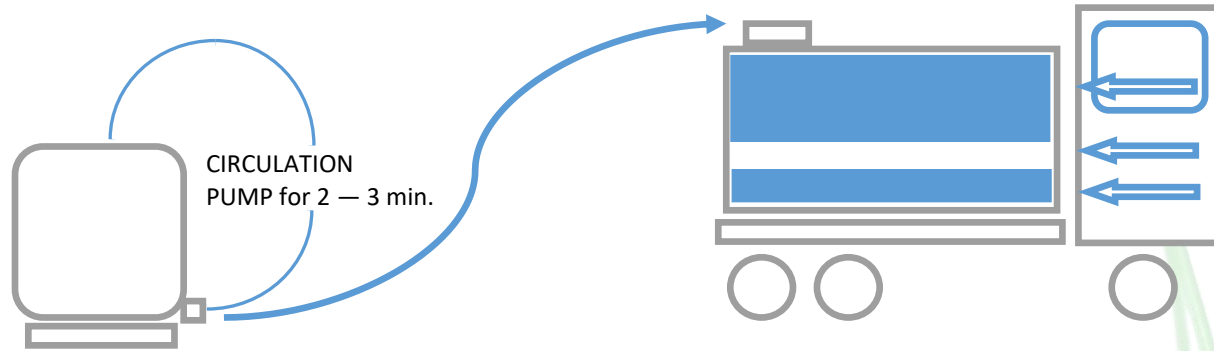

1. Add some water, about 10% - 20% of the total amount needed for the treatment
2. Add concentrated Dust/Blokr[®] Polymer Blend
3. Add rest of the water

A It is essential to use a circulation pump for a couple of minutes to ensure an even concentration of the polymer solution in the liquid as you can see in the picture below when the IBC tote is freshly opened



B When mixing the concentrated Polymer Blend with water, please add first some 10-20% of the water amount into the container and add Polymer Blend after that. Finally you can add the rest of the water and start working immediately using a pump and hose with nozzle suitable for the work



C Spray the liquid in 2—3 thin layers and avoid soaking the material completely. After the area has been treated, clean your equipment with clean water. The cleaning water with residues of Polymer Blend can be spread onto the treated material

